

1" PIPE PLATEN

"ORANGE" INSTALLATION PIPE

1/4" PIPE COUPLING

1/4" PIPE

1" PIPE COUPLING


REFERENCE CAP

RIGHT TO LEFT HAND COUPLING ADAPTER

BORROS ANCHOR

1/4" PIPE PLATEN

RIGHT TO LEFT HAND COUPLING ADAPTER

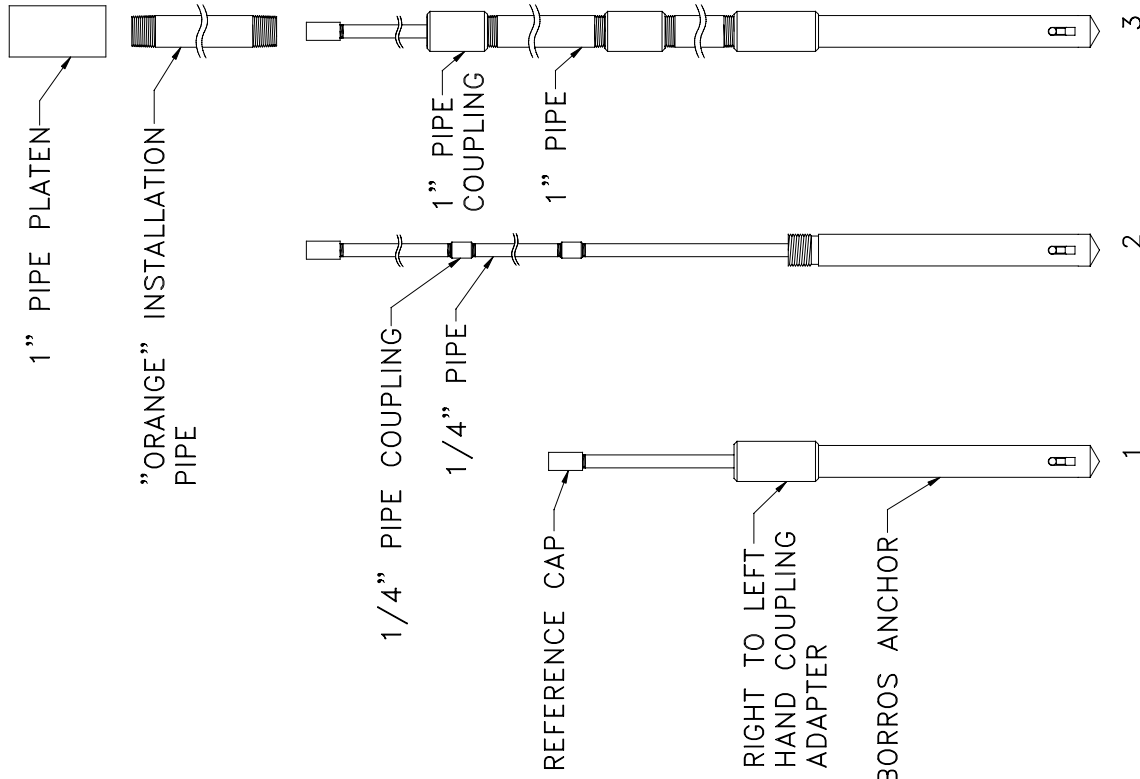

1

2

3

4


5

6

INSTALLATION INSTRUCTIONS

1. BORROS ANCHOR AS SHIPPED, DRILL A BOREHOLE APPROX. 3 FT ABOVE THE DESIRED ANCHOR ELEVATION AND FLUSH CLEAN. SITE CONDITIONS MAY REQUIRE THAT THE BOREHOLE BE CASED.
2. REMOVE REFERENCE CAP AND ATTACH 1/4" PIPE COUPLING AND 5 FT LENGTHS OF 1/4" PIPE AS REQUIRED. SCREW REFERENCE CAP ONTO THE TOP PIPE.
3. SCREW LEFT HAND/RIGHT HAND COUPLING HAND TIGHT ONTO BORROS ANCHOR. ADD 5 FT LENGTHS OF 1" PIPE AND 1" PIPE COUPLINGS AS REQUIRED. SCREW "ORANGE" INSTALLATION PIPE INTO TOP COUPLING AND PLACE 1" PIPE PLATEN OVER TOP. PRESS BORROS ANCHOR INTO HOLE.
4. REMOVE 1" PIPE PLATEN, "ORANGE" INSTALLATION PIPE AND TOP 1" PIPE COUPLING. FIT 1/4" PIPE PLATEN OVER REFERENCE HEAD.

5. SECURE THE ASSEMBLY AND THEN HAMMER THE PLATEN DOWNWARDS APPROX. 7" TO EXTEND THE ANCHOR PRONGS.
6. REMOVE 1/4" PIPE PLATEN. DETACH THE 1" PIPE FROM THE LEFT HAND THREADED ANCHOR BY TURNING CLOCKWISE AT LEAST 15 FULL REVOLUTIONS. PULL THE 1" PIPE UPWARD A DISTANCE SLIGHTLY GREATER THAN THE ANTICIPATED AMOUNT OF HEAVE OR SETTLEMENT. SCREW PVC PROTECTIVE CAP ONTO TOP 1" PIPE. BACKFILL AROUND THE 1" PIPE WITH CLEAN SAND OR AS SPECIFIED.

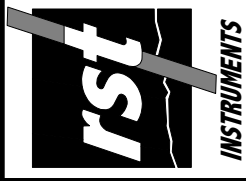

BORROS ANCHOR

INSTALLATION INSTRUCTIONS

SCALE:	NTS	DWG NO.:	SSM0007B	REV.:	B
DATE:	99/06/17	CHKD.:		DRAWN BY:	LH

REVISION TABLE